

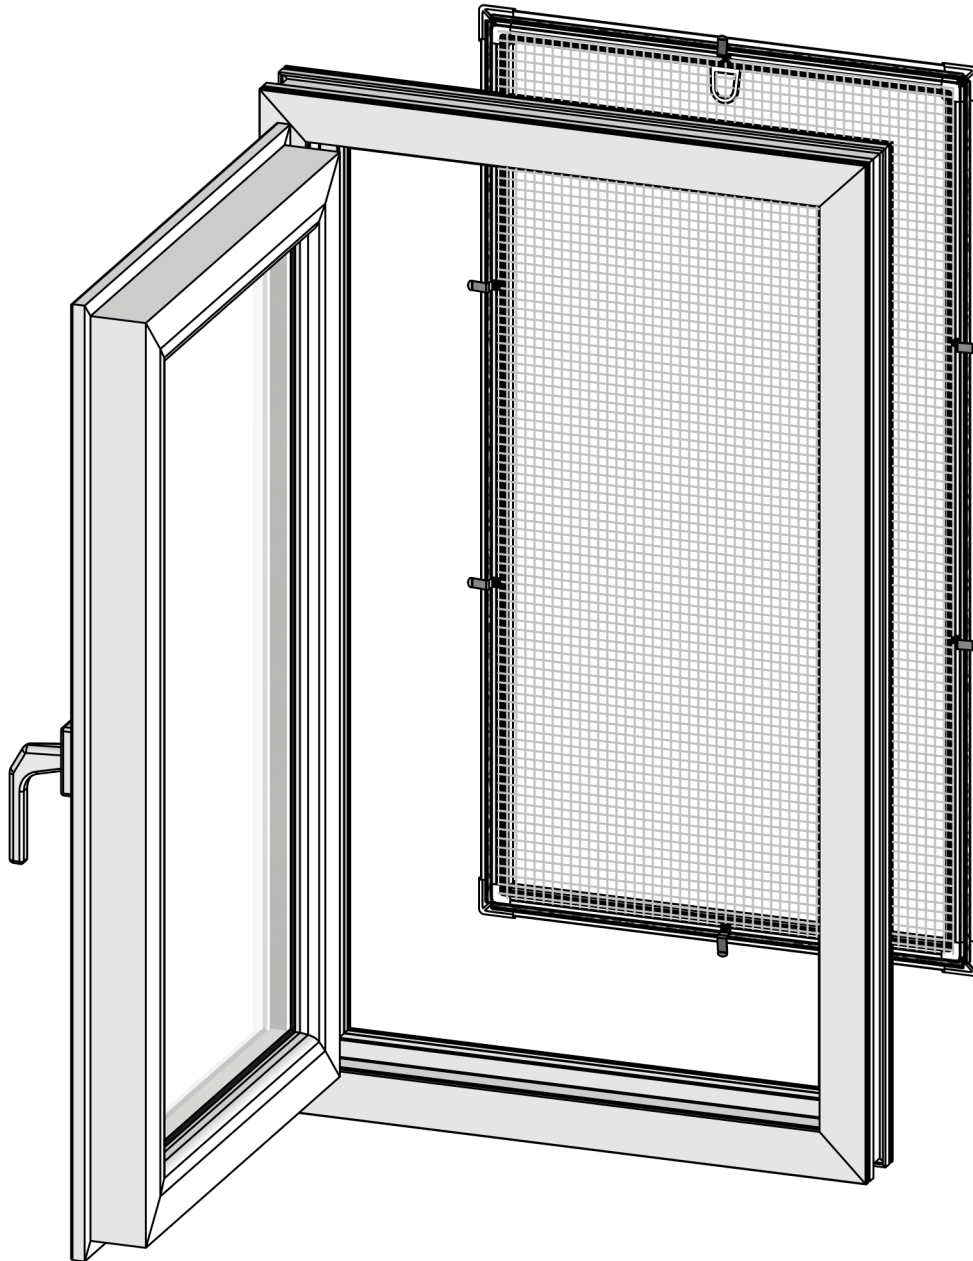
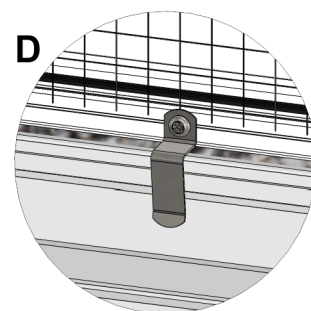
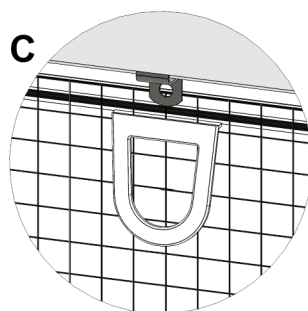
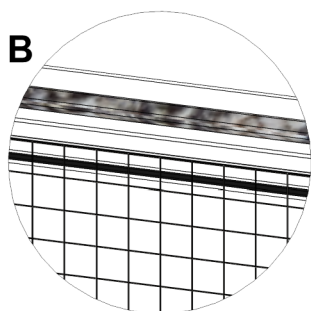
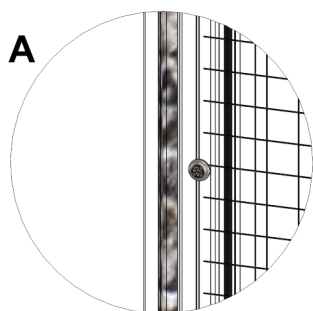


Vegas Mosquito - window insect screen

Assembly instruction

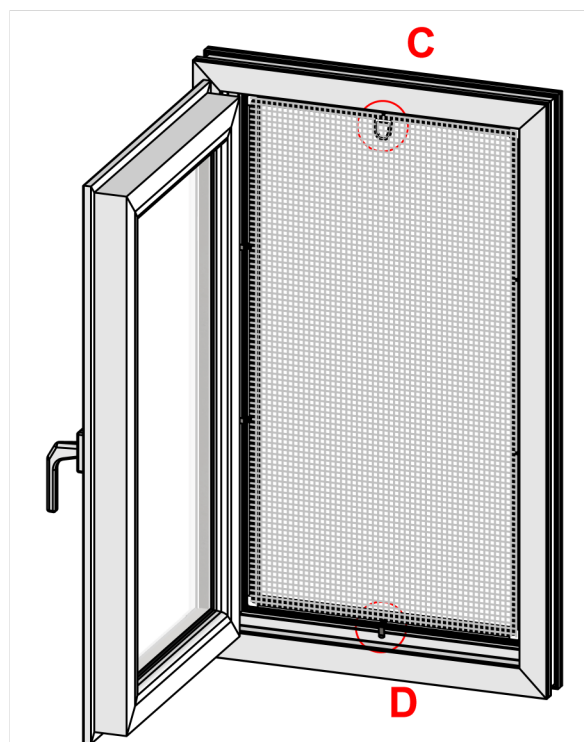

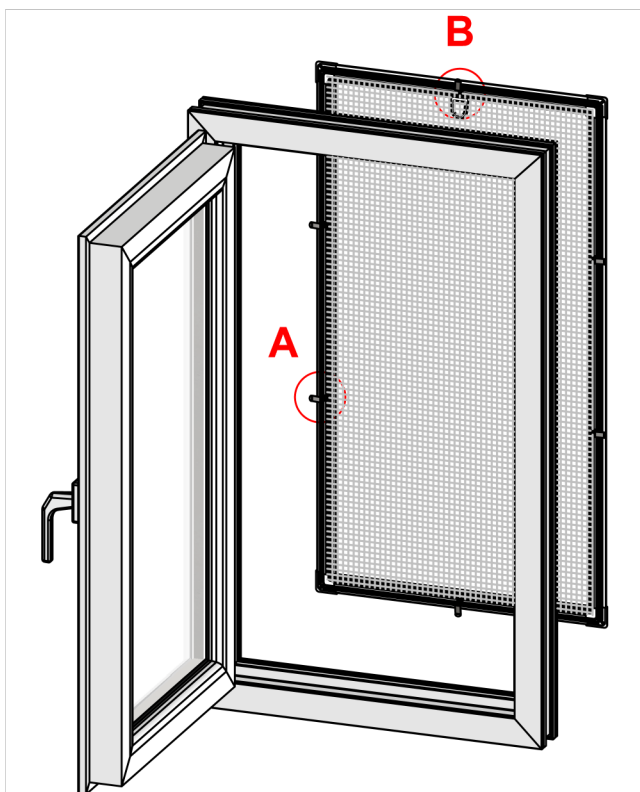

1. Turn the rotating handles towards the centre of the insect screen.

Then secure its position using the rotating handles.

Window insect screen use instruction

2. Using the top handle fit the insect screen onto the

Measurement and assembly

- Measurement and assembly should be done by a trained person.
- The manufacturer is not liable for incorrect measurement or assembly.

Use

- To open the insect screen door use the handle shaped middle bar.
- Use the insect screen only when there is no obstacles within its opening range.
- In case of incorrect operation of the insect screen please inform the seller.

Insect screen care

- The insect screen should be cleaned from time to time.
- The insect screen should be disassembled and protected during any renovation or high dustiness.

The manufacturer is not liable for:

- Improper net tension due to incorrect use.
- Assembly inconsistent with intended use (in places where the mesh may be deformed like high humidity area or next to the sources of heat).
- Loss of aesthetics due to dirt, chemical damage, etc.
- Any damages to the insect screen caused by remaking or repairing done by the customer.
- Any scratches on the varnish and damage to the mesh while unpacking the product.
- Any mechanical damage or damage caused by:
 - Inappropriate use
 - Careless storage or excessive overload
 - Failure to comply with the manufacturer assembly instructions